


CAM 150-180


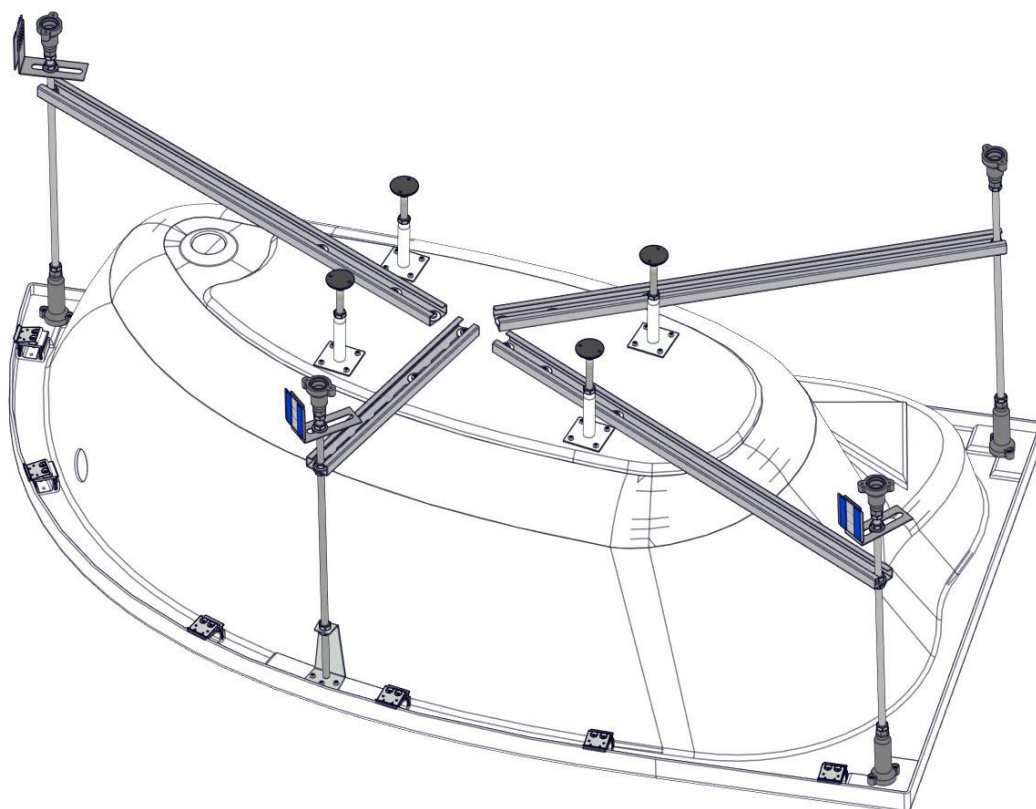


PDF




- SI** Podnožje kopalne kadi CAM 150-180 - navodilo za montažo
- HR** Podnožje za kadu CAM 150-180 - upute za montažu
- SRB** Podnožje za kadu CAM 150-180 - uputstvo za montažu
- МК** Подножје на када CAM 150-180 - упатства за монтажа
- RU** Основание ванны CAM 150-180 - инструкция по монтажу
- UA** Основа для ванни CAM 150-180 - інструкція зі збирання
- HU** CAM 150-180 fürdőkádtalp - összeszerelési útmutató
- RO** Bază CAM 150-180 pentru cadă de baie - instrucțiuni de asamblare
- GB** CAM 150-180 bathtub base - assembly instructions
- DE** CAM 150-180 Wannenfüße - Aufbauanleitung
- IT** Base vasca da bagno CAM 150-180 - istruzioni di montaggio
- FR** Support pour baignoire CAM 150-180 - instructions de montage



kolpa·san
by KOLPA

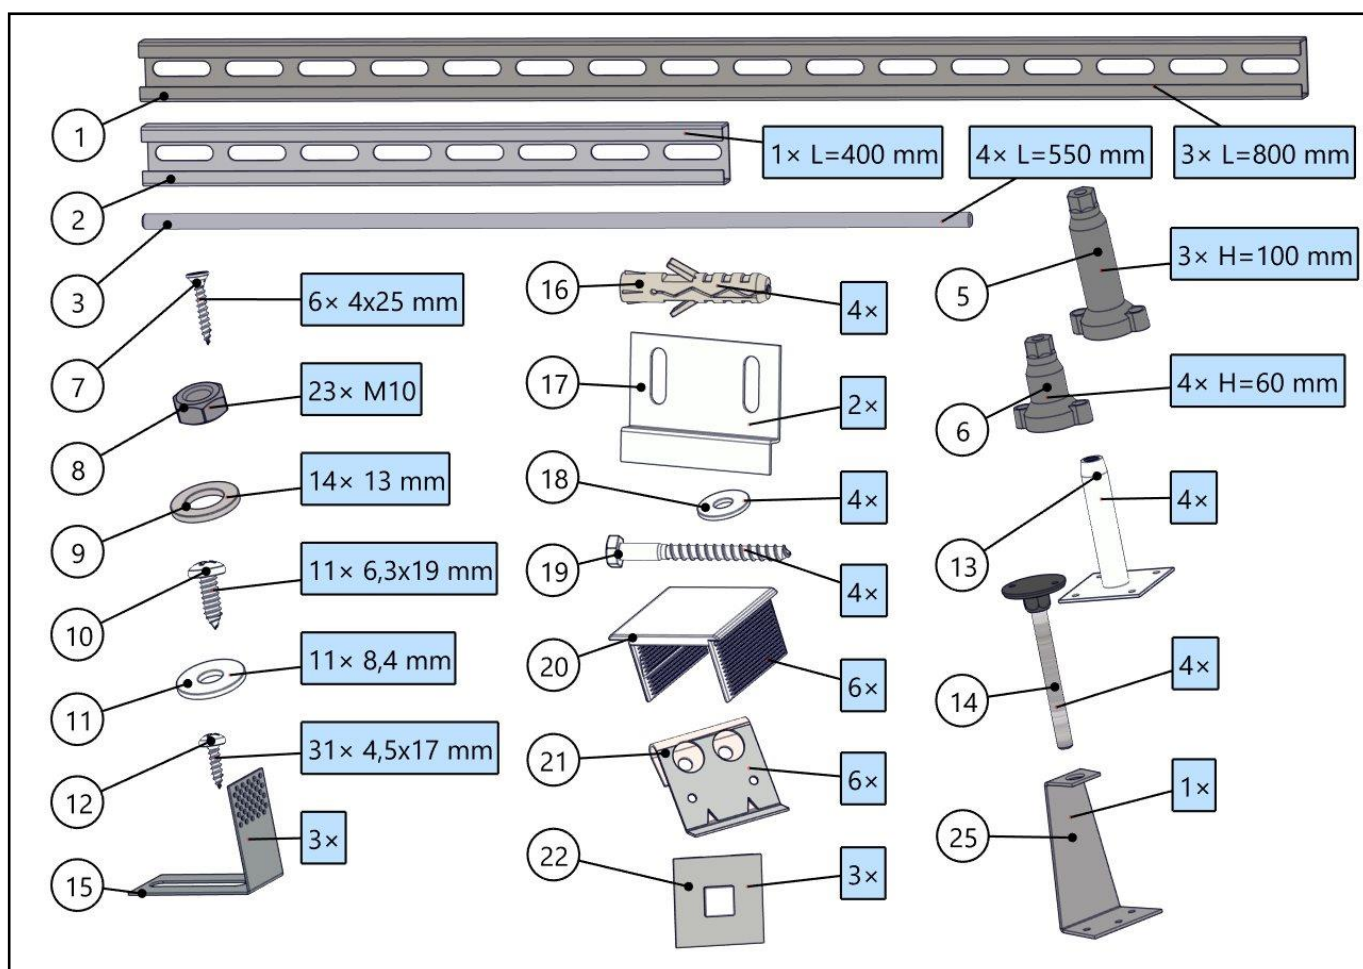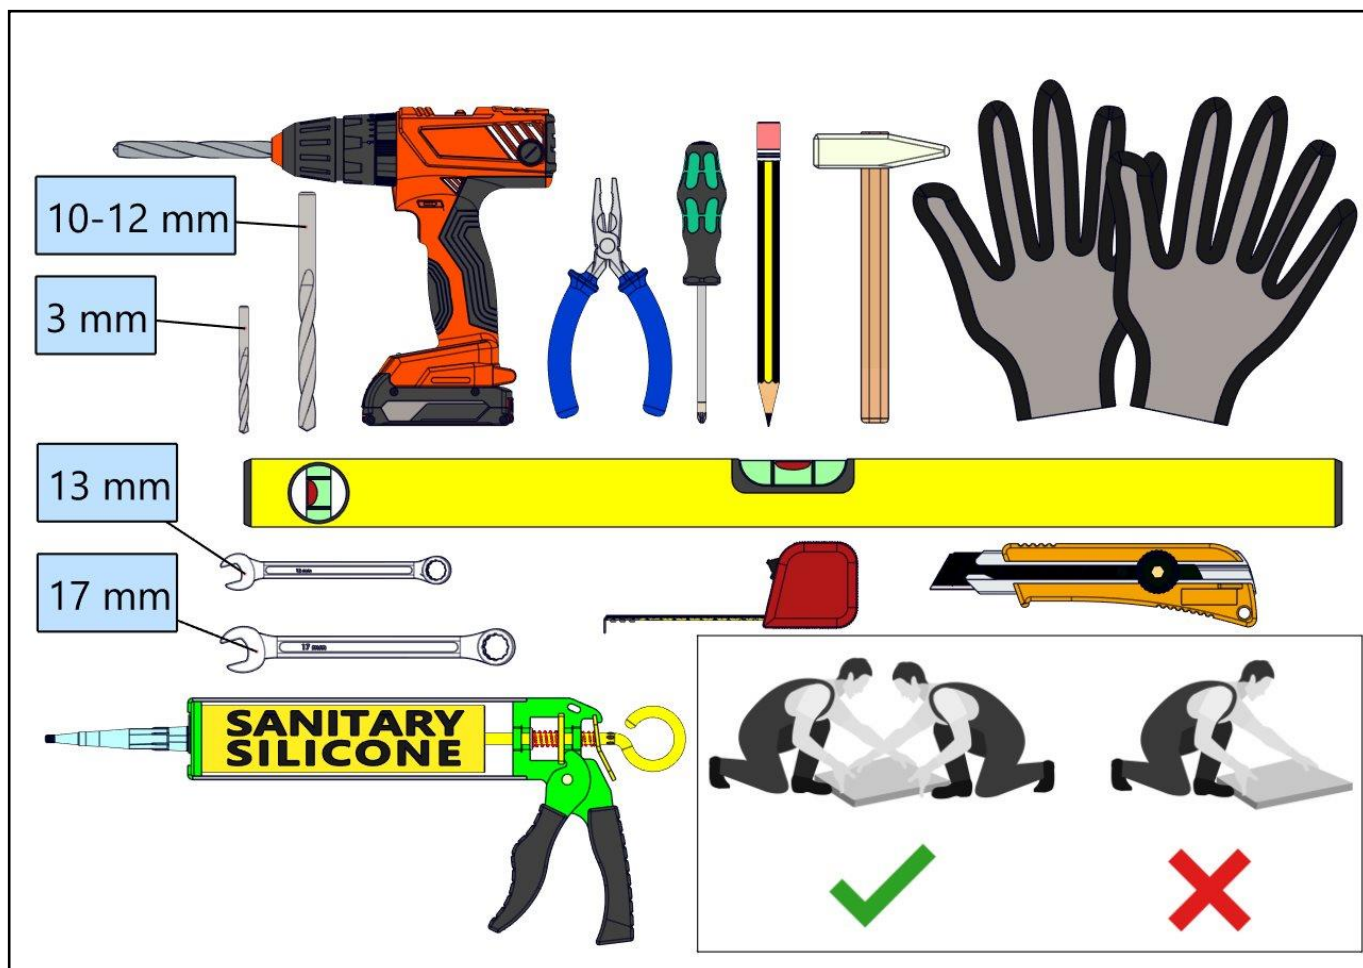



1





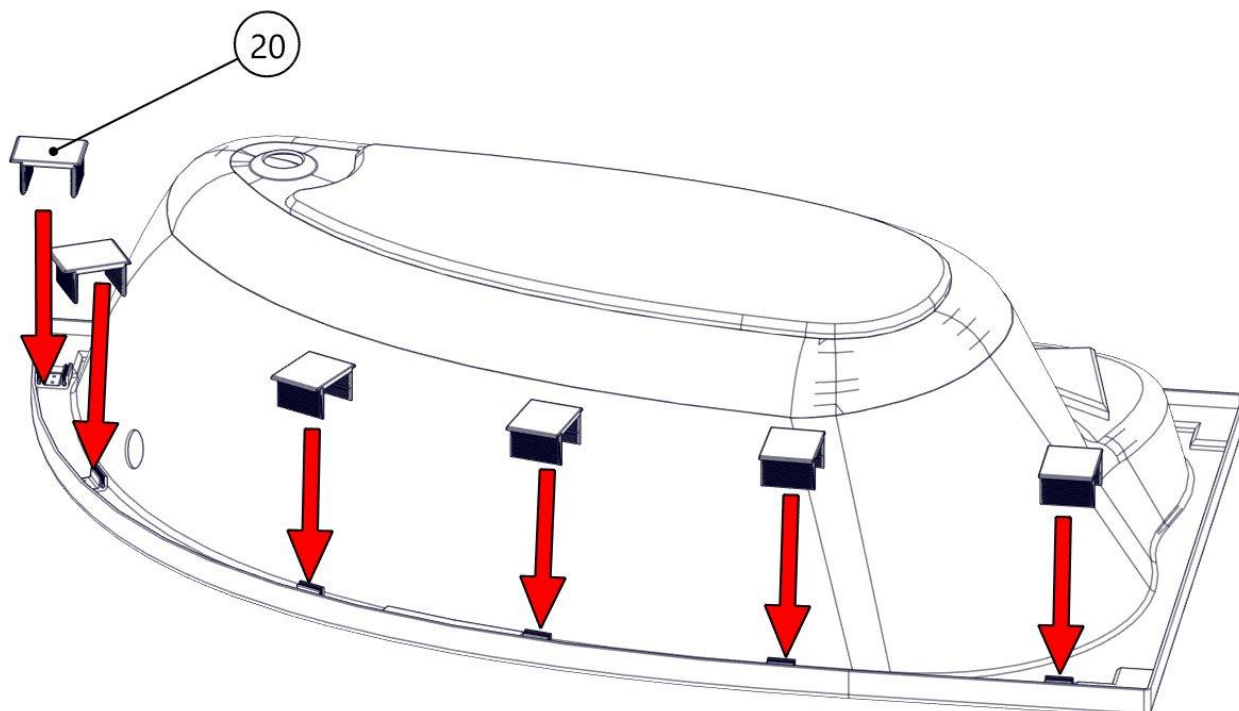




2

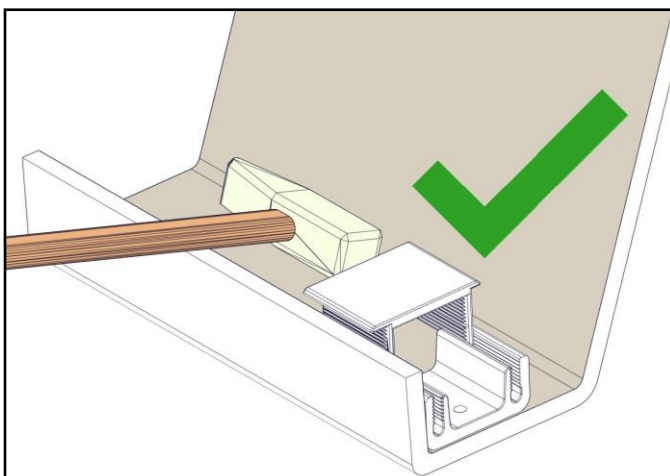
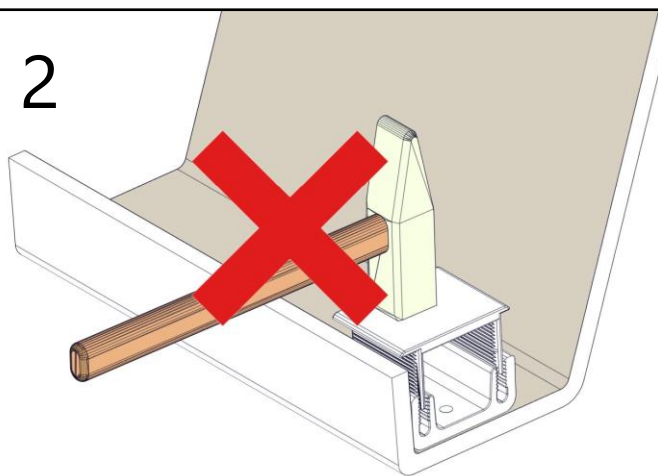




2.1





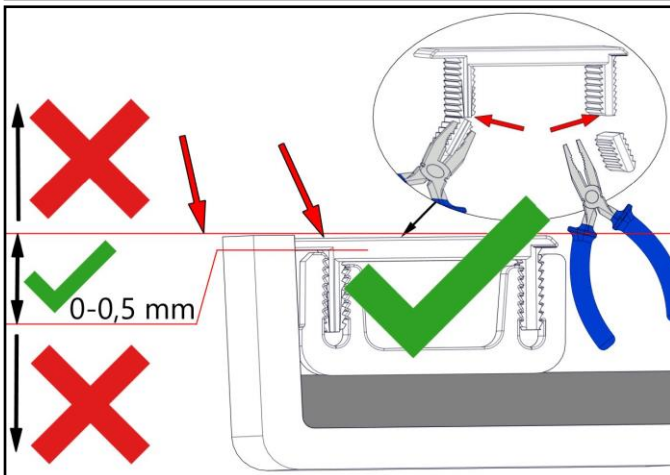
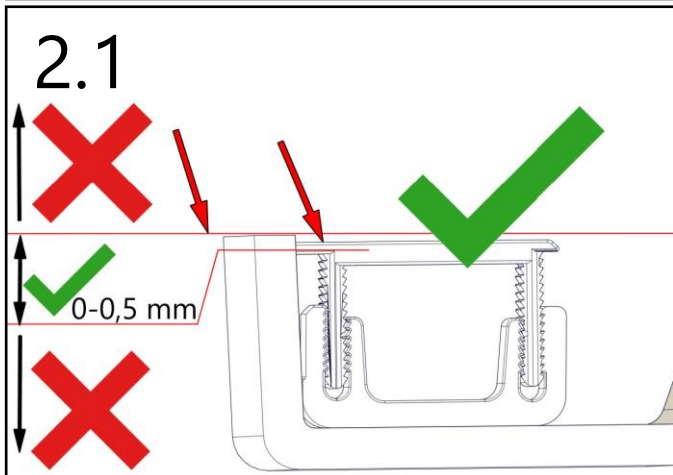


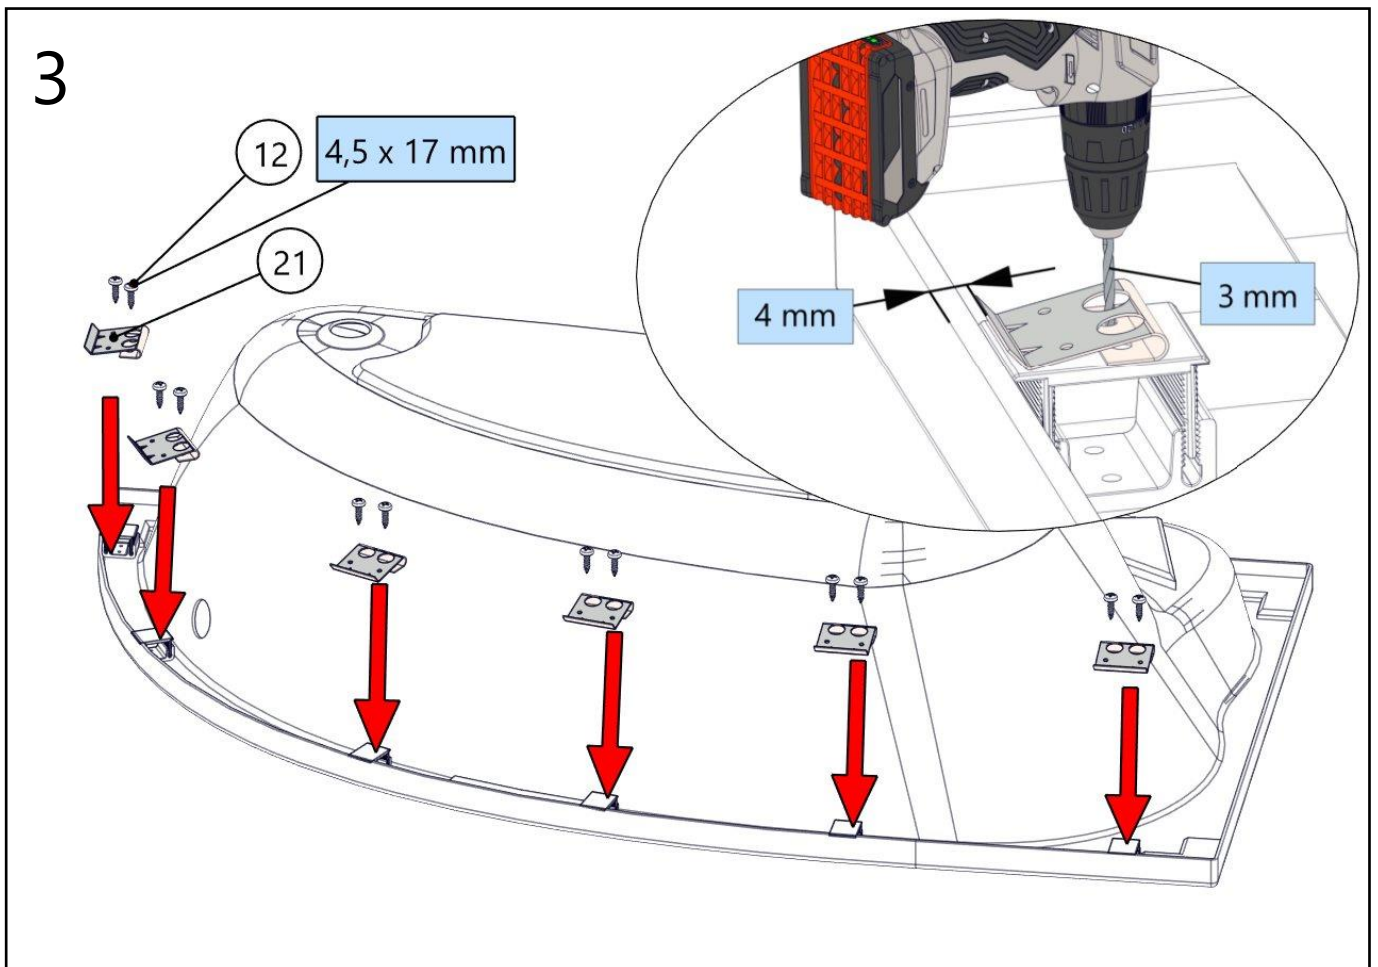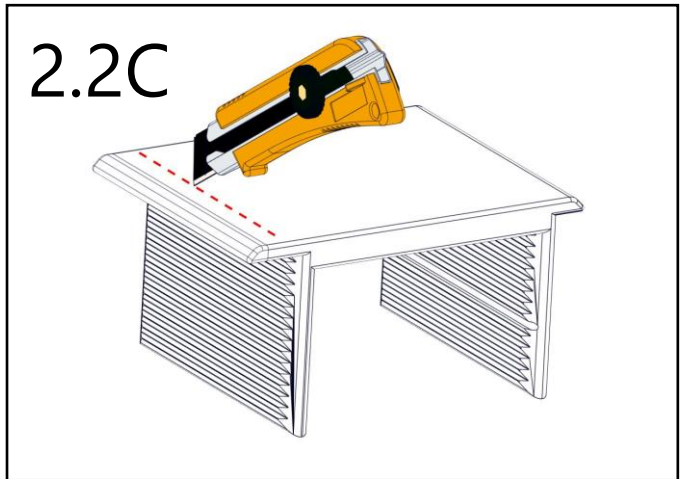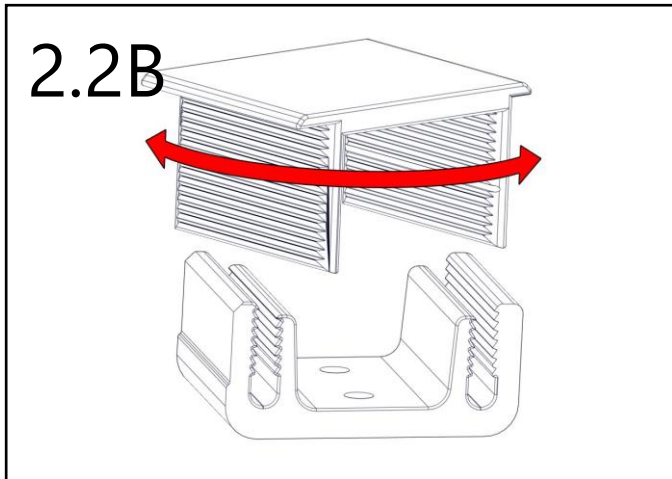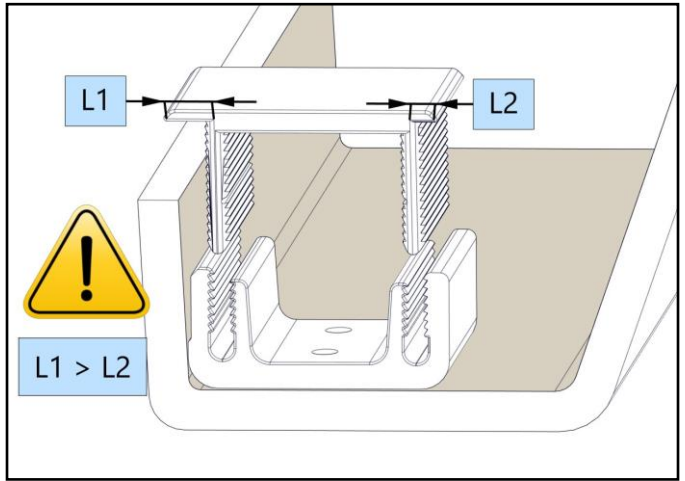
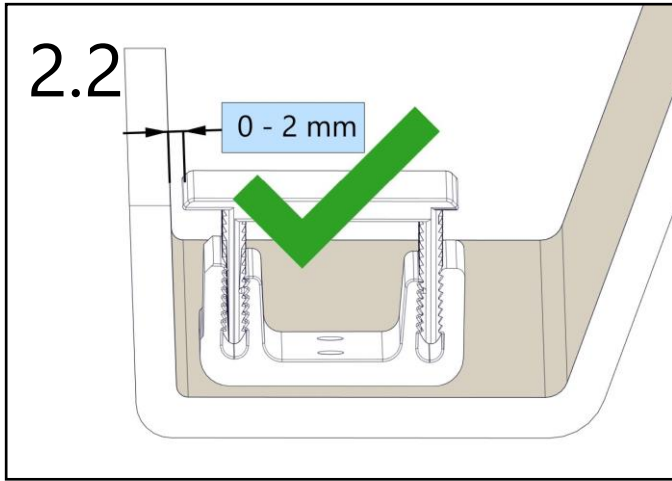





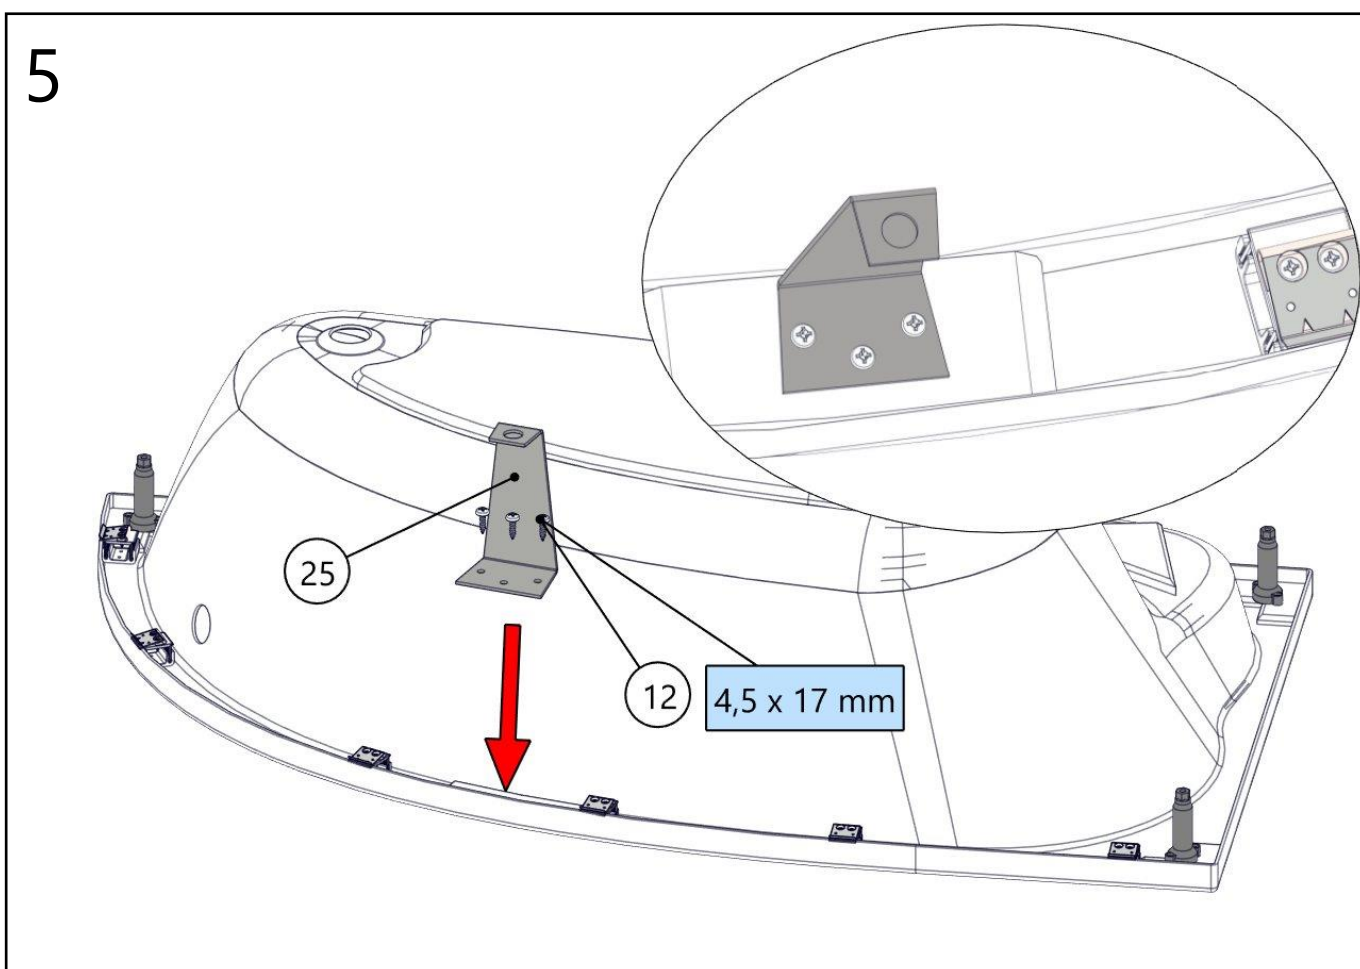
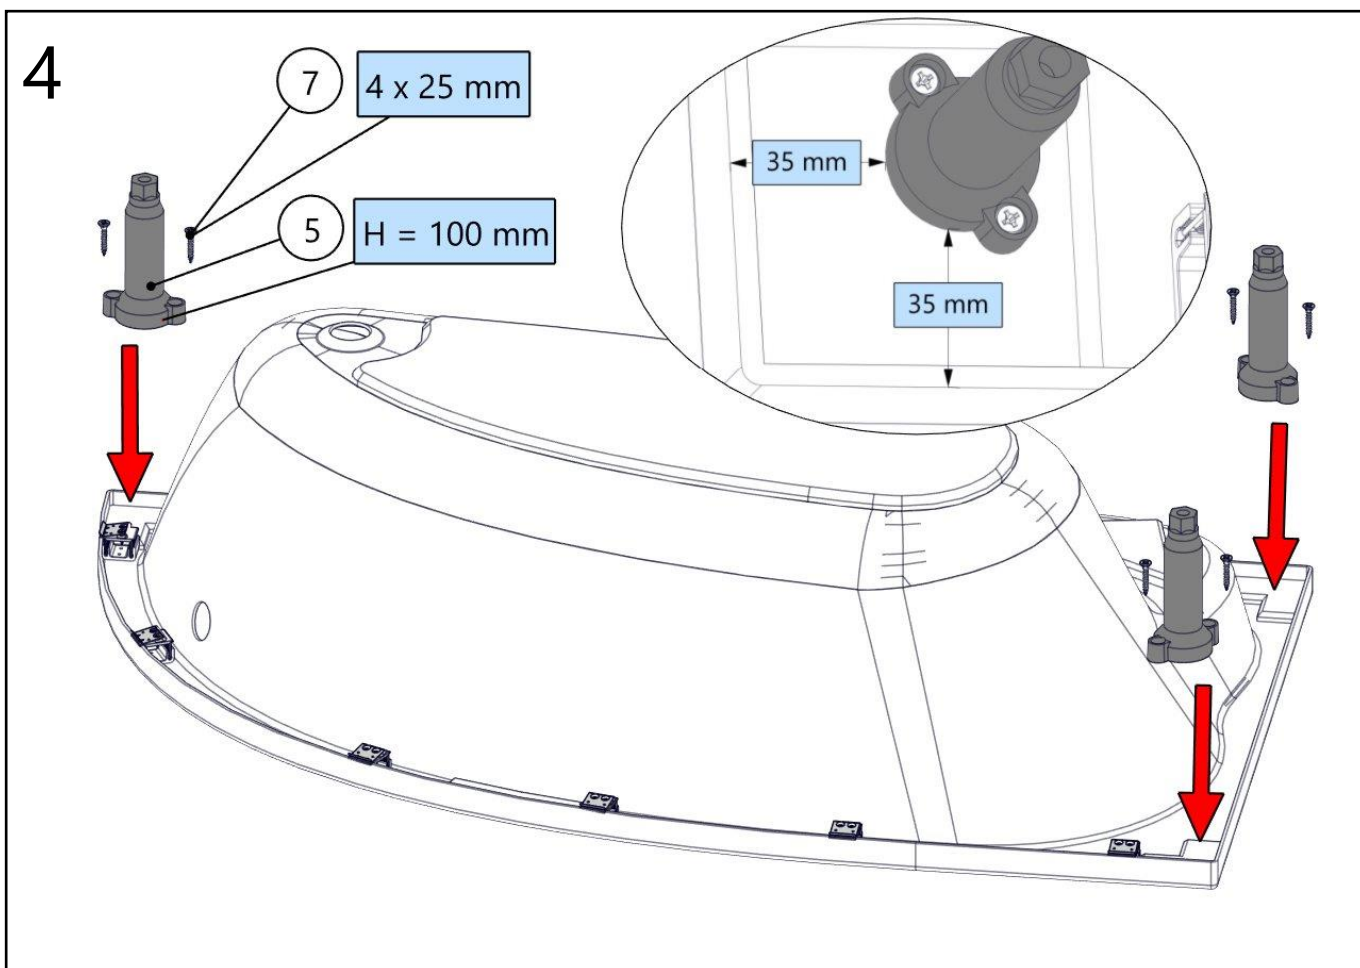





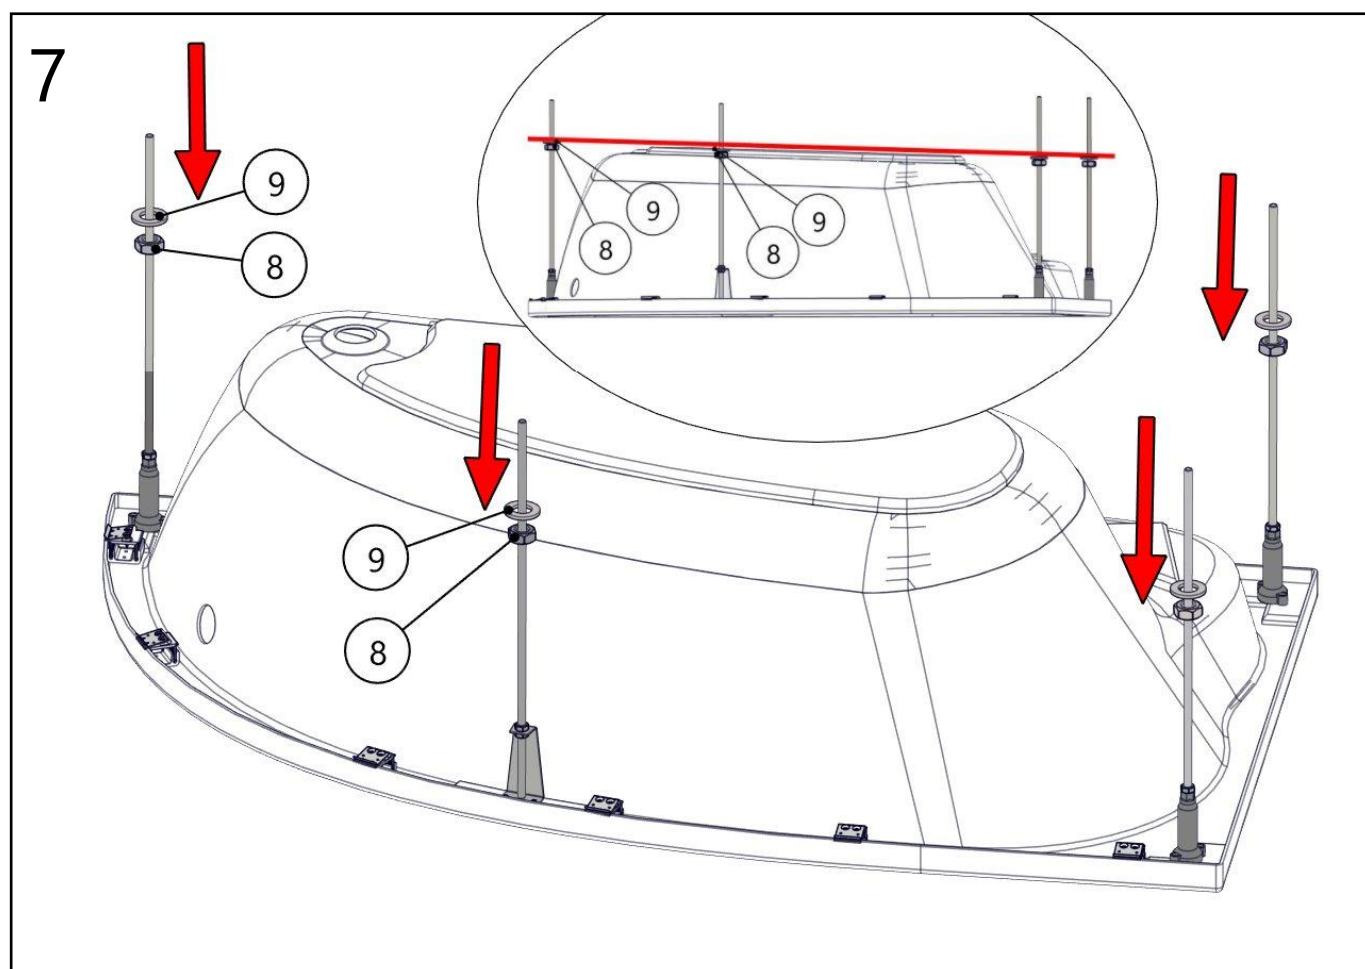
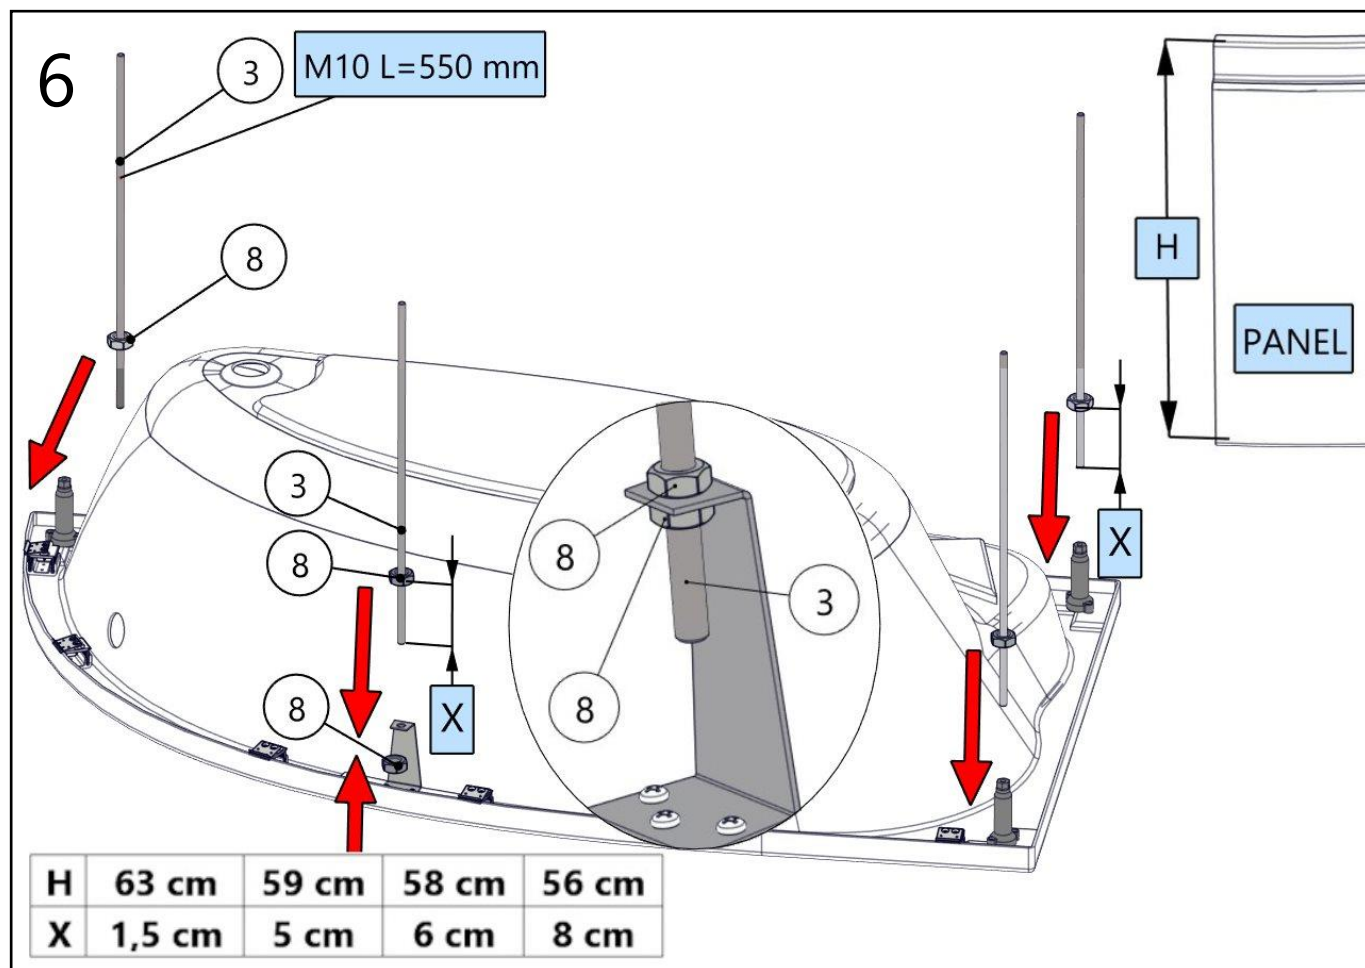


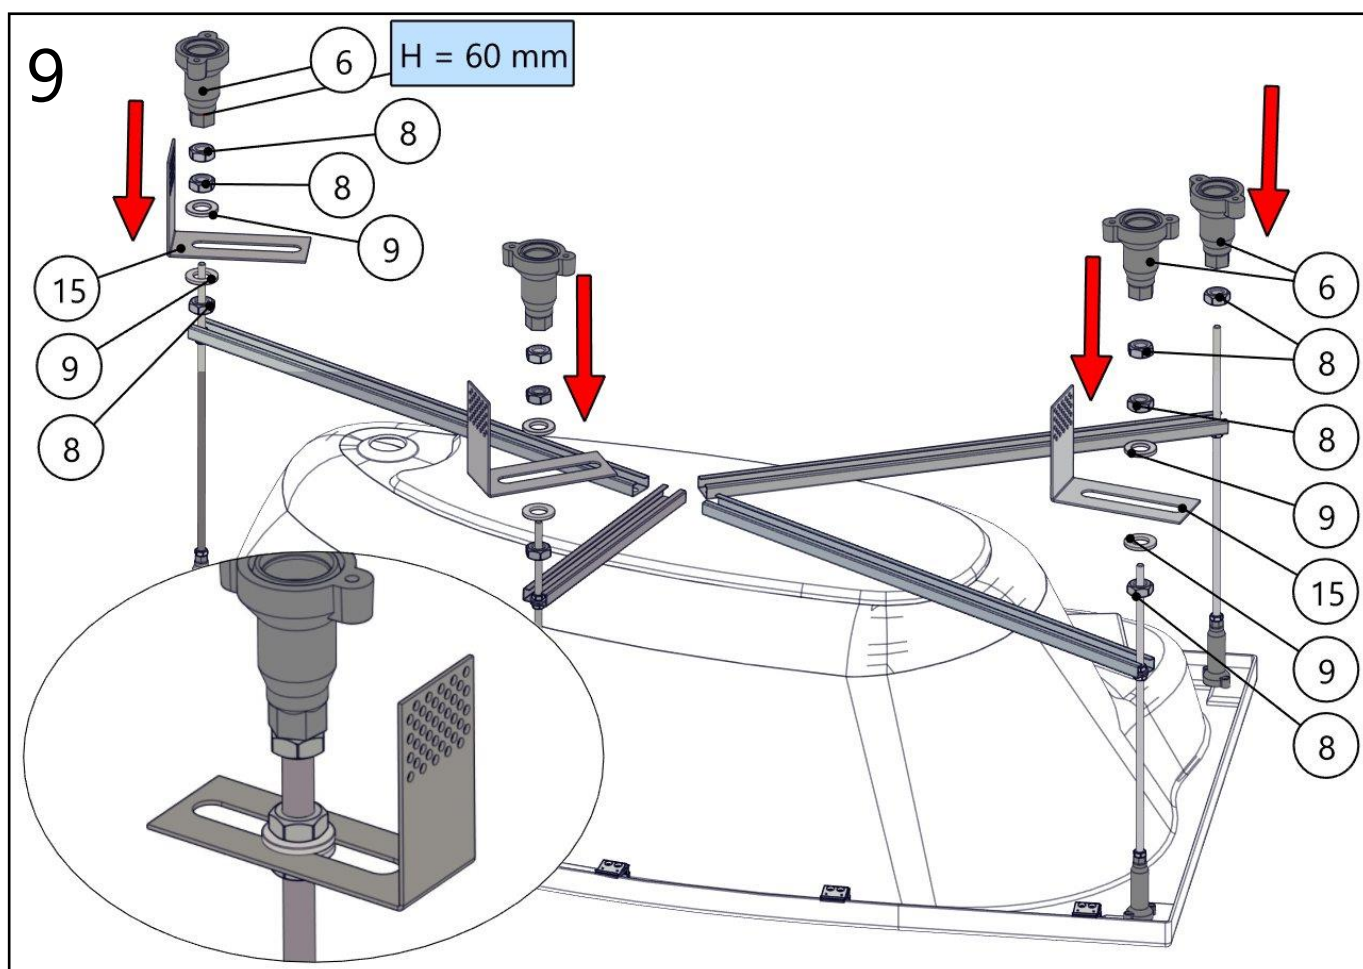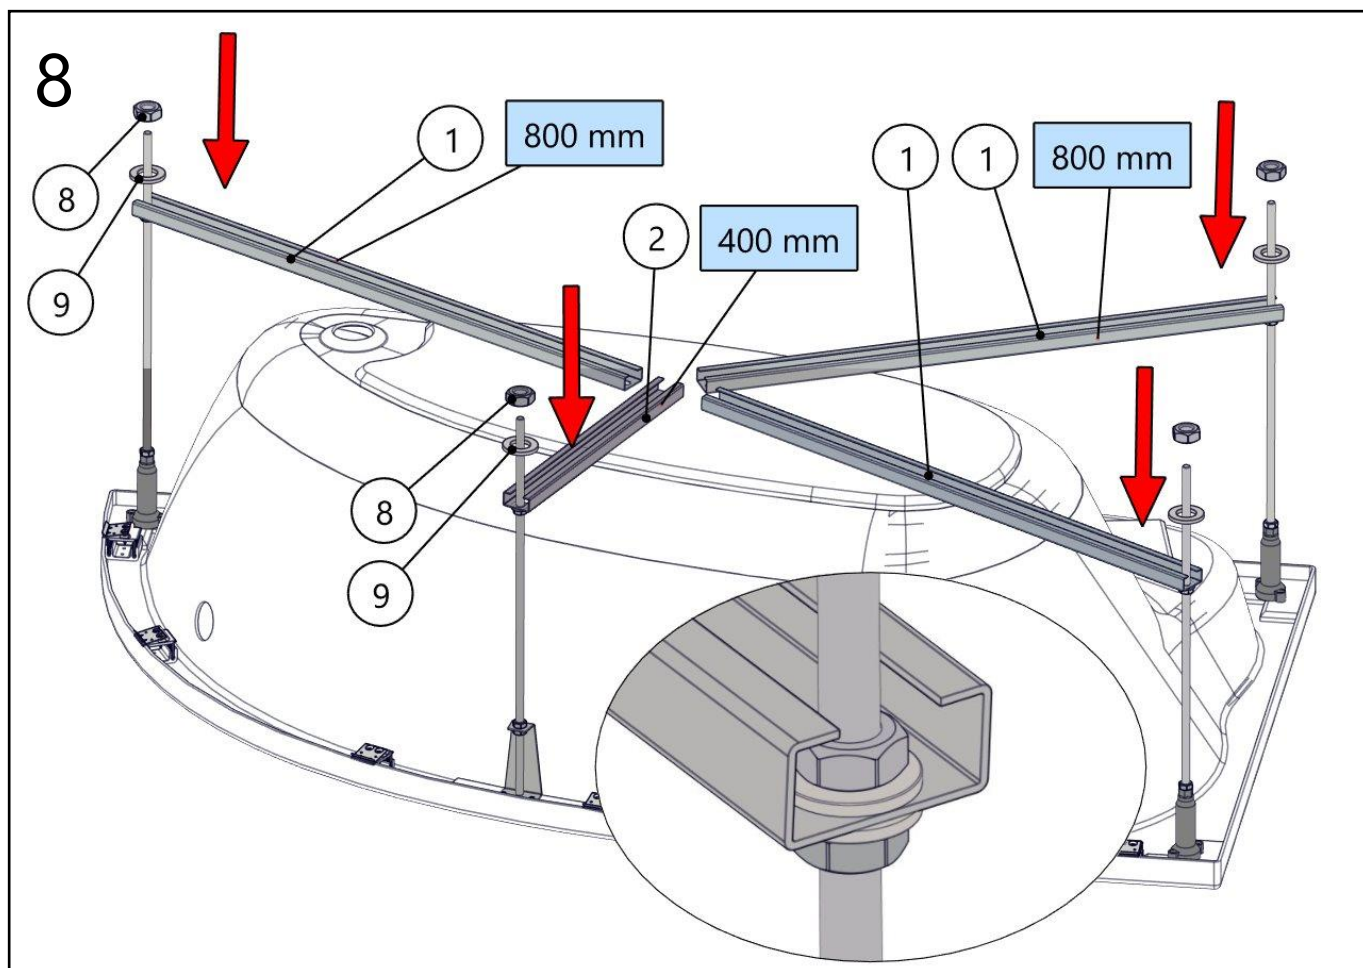

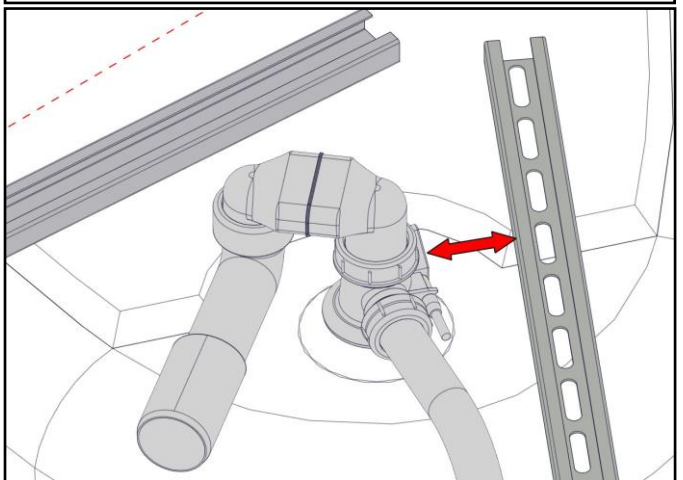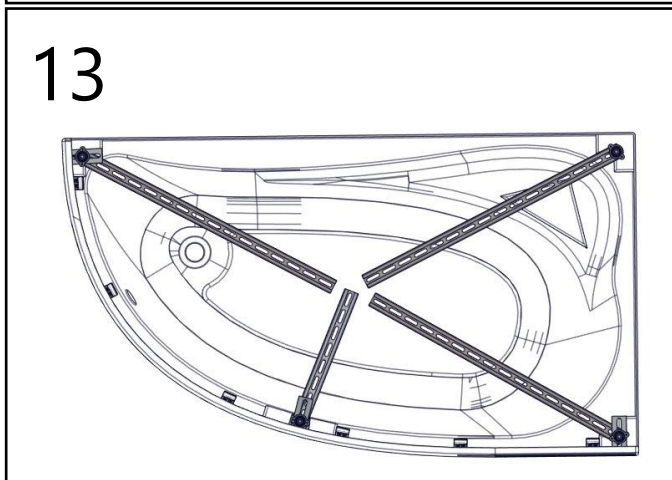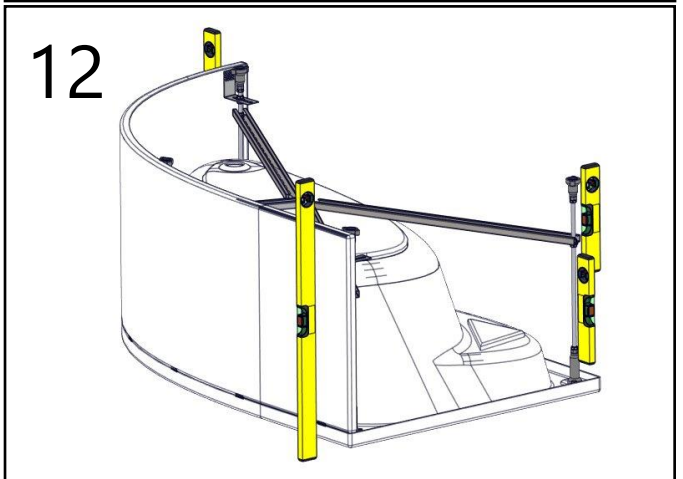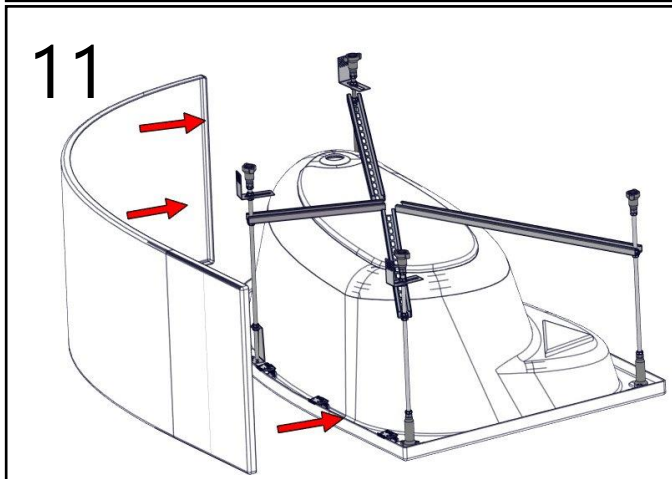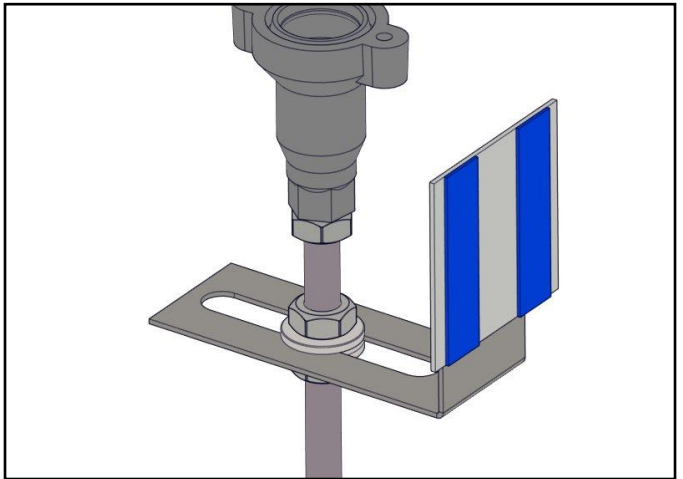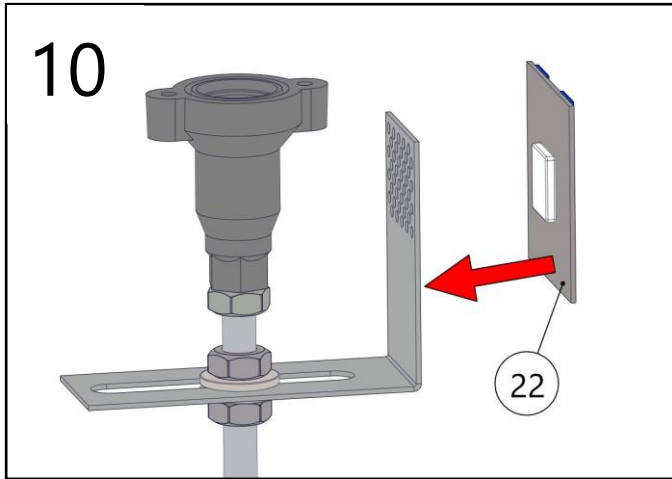


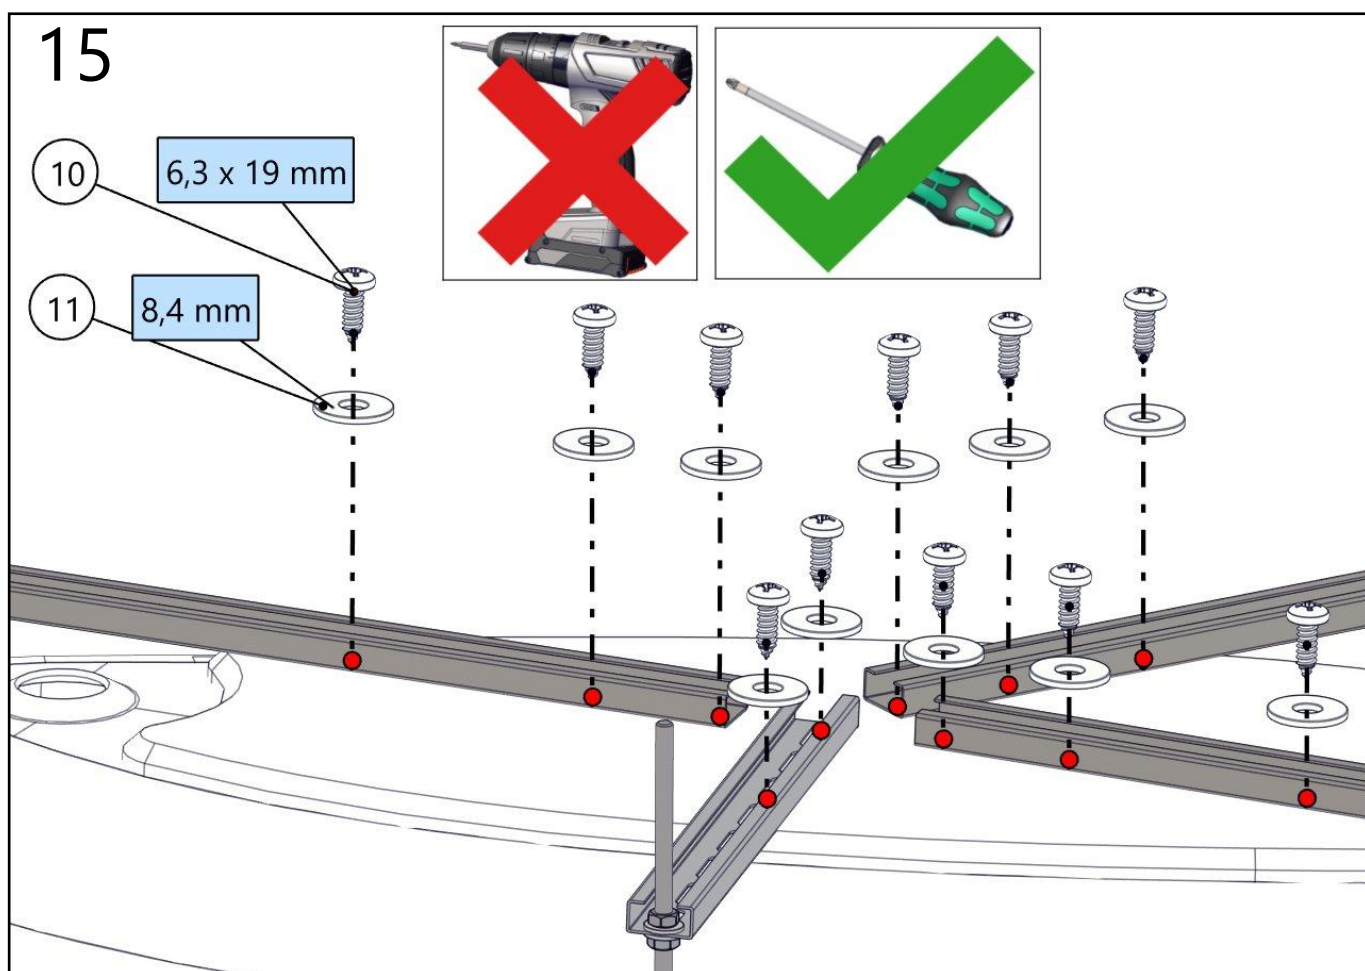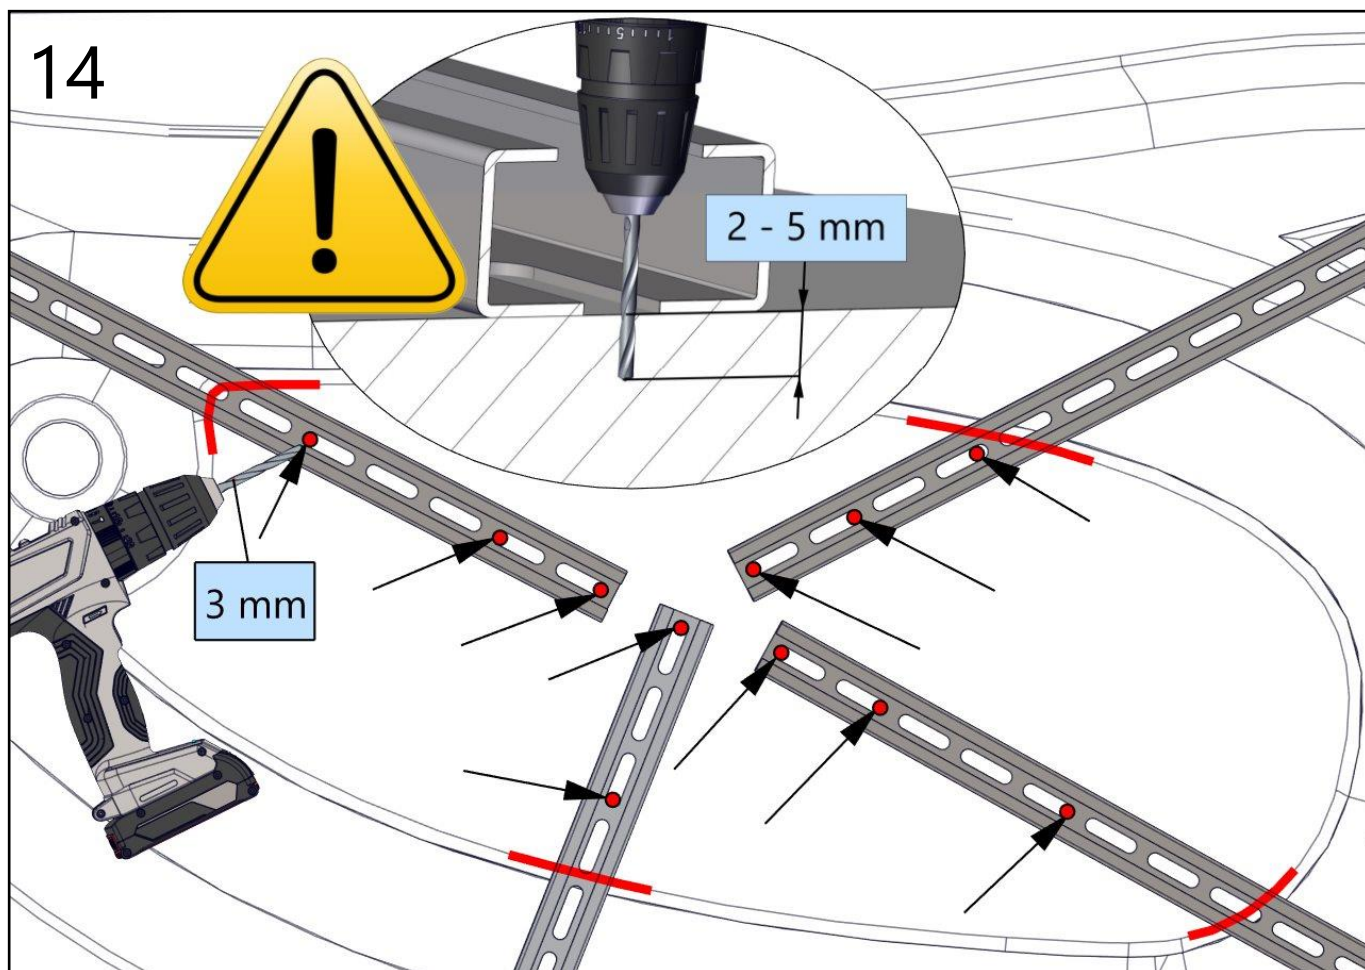

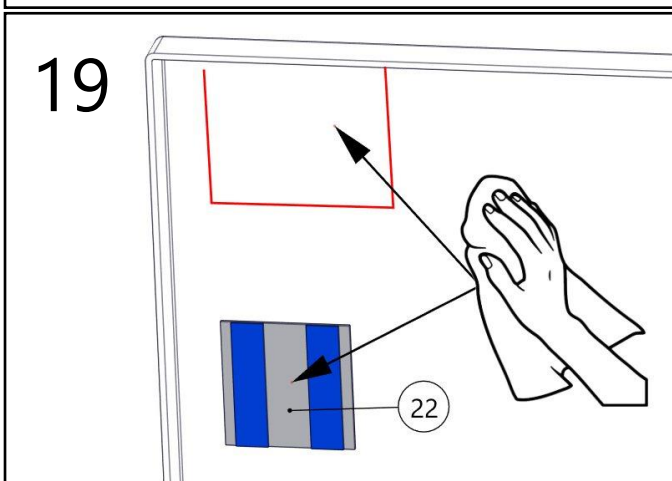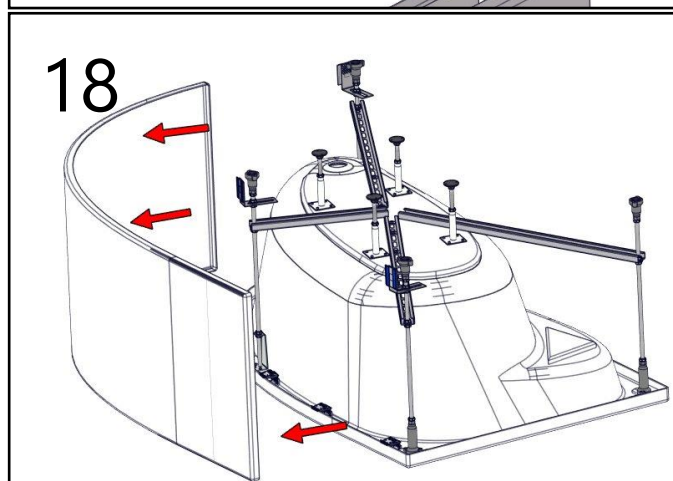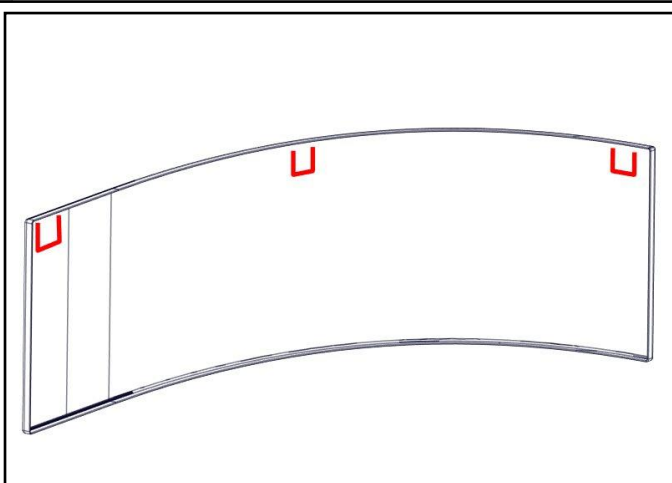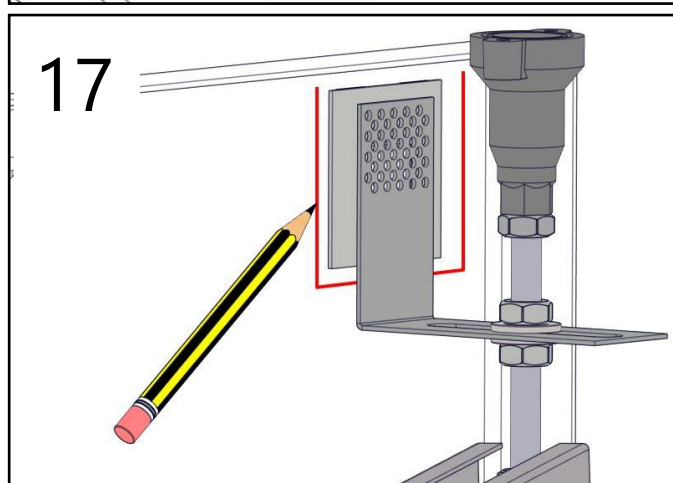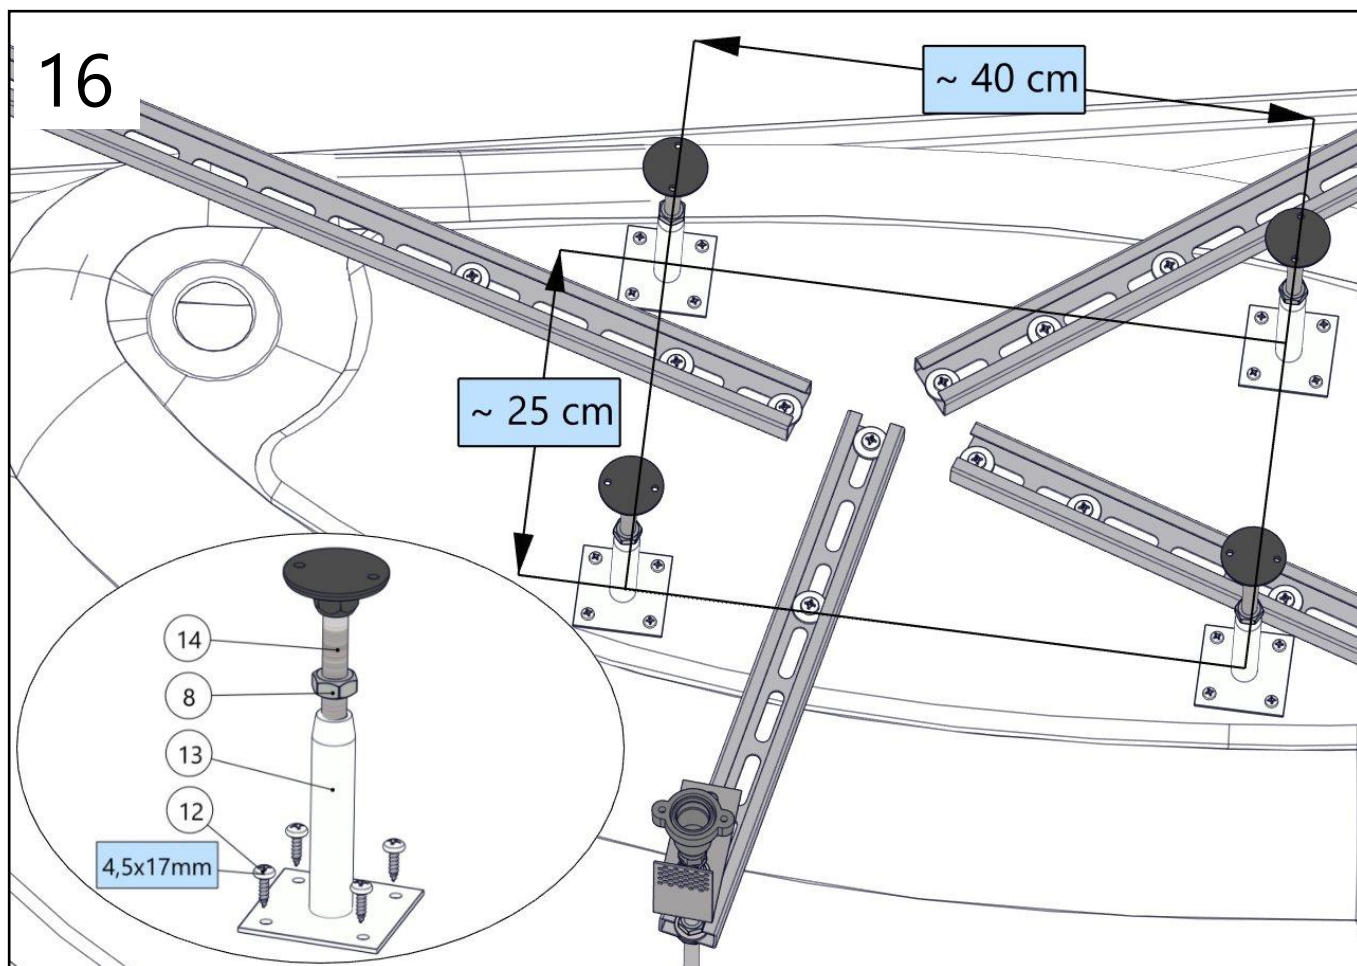


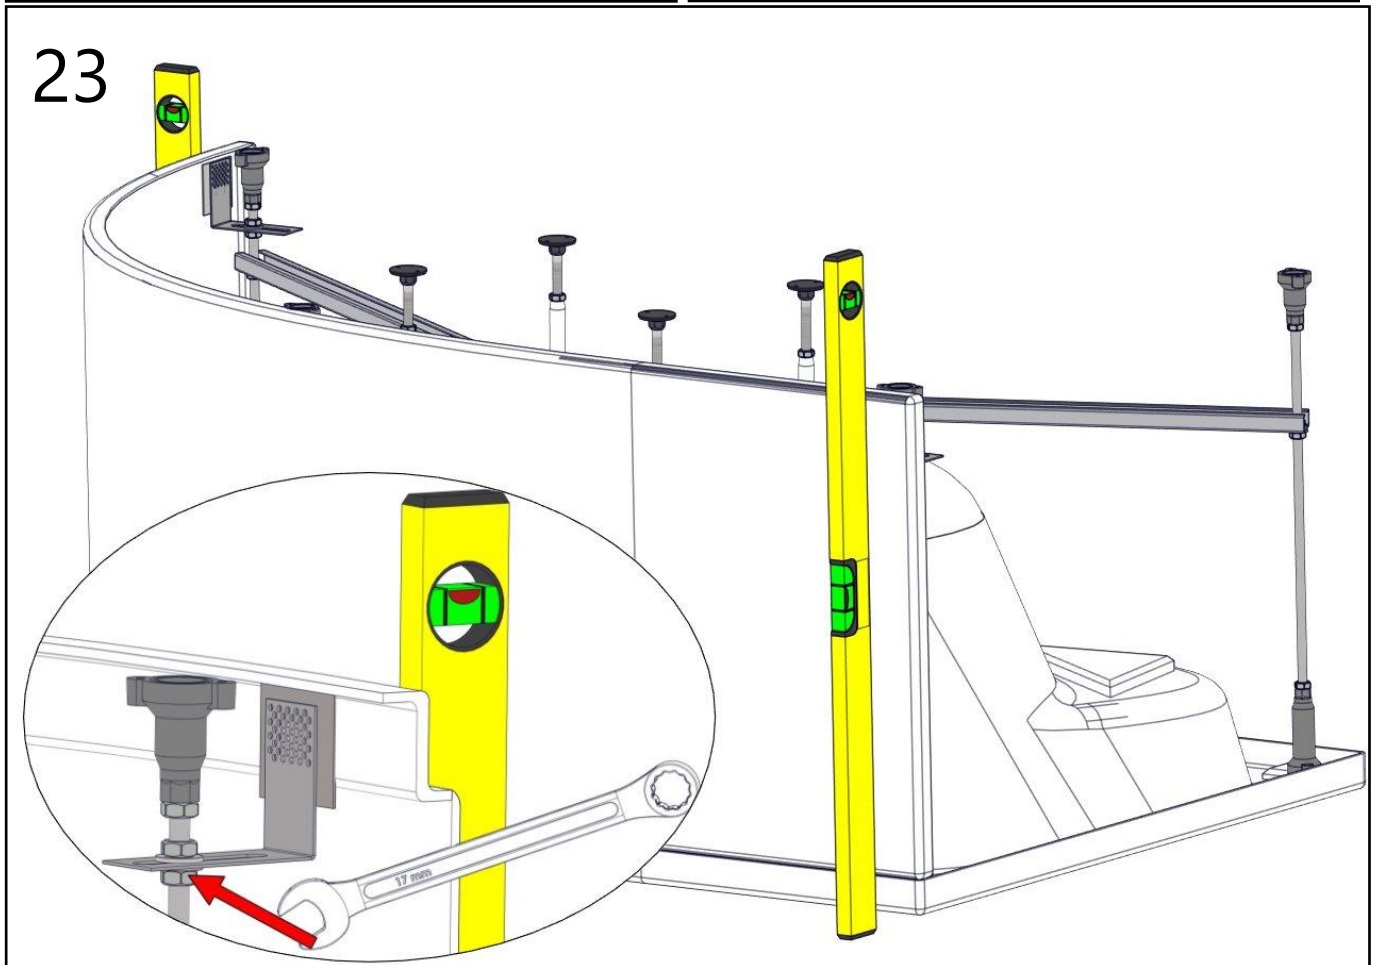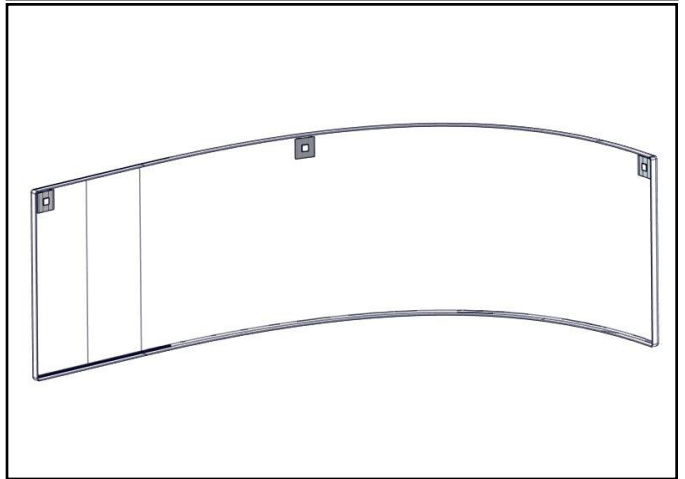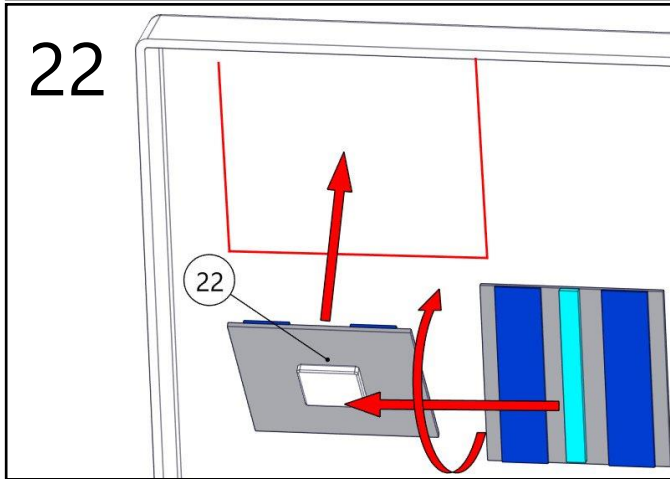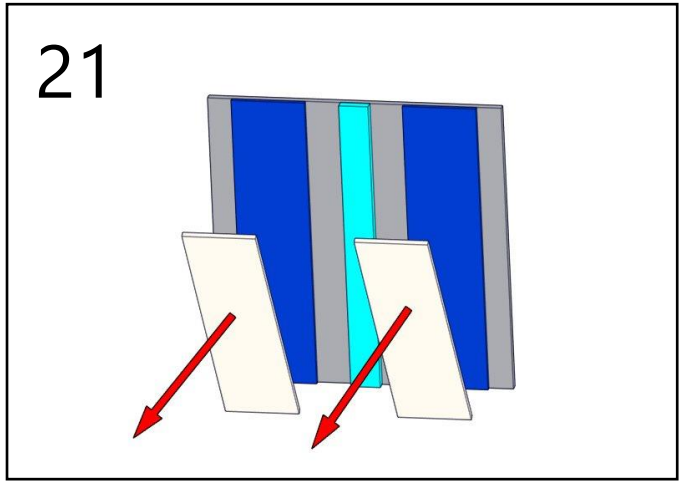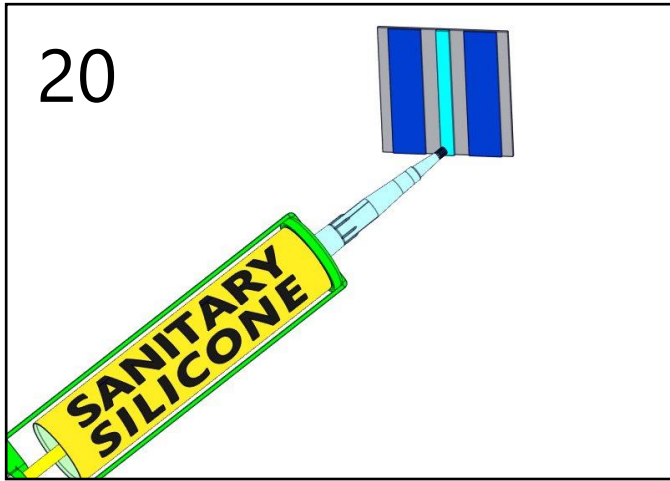


24

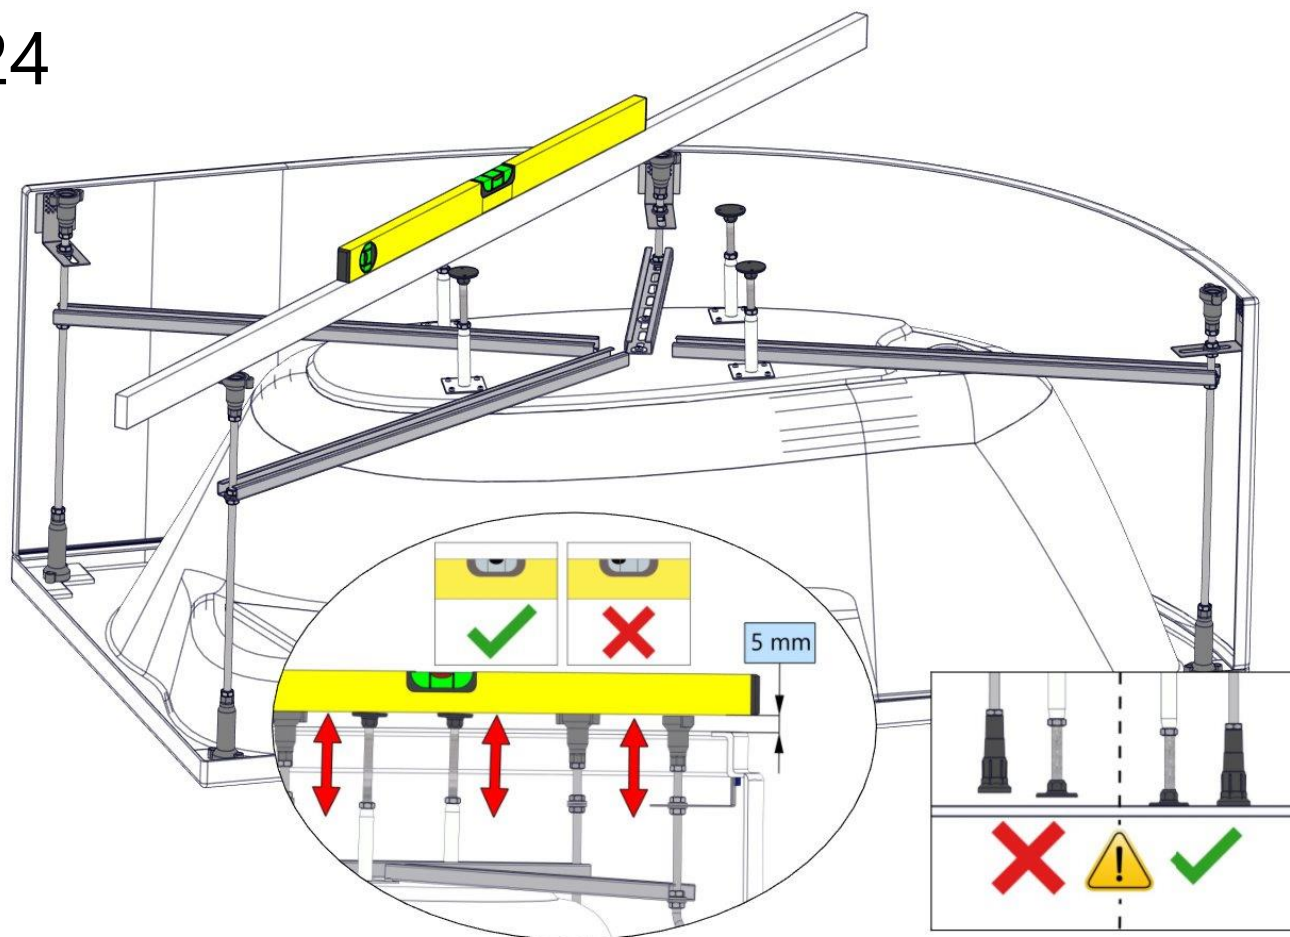


25






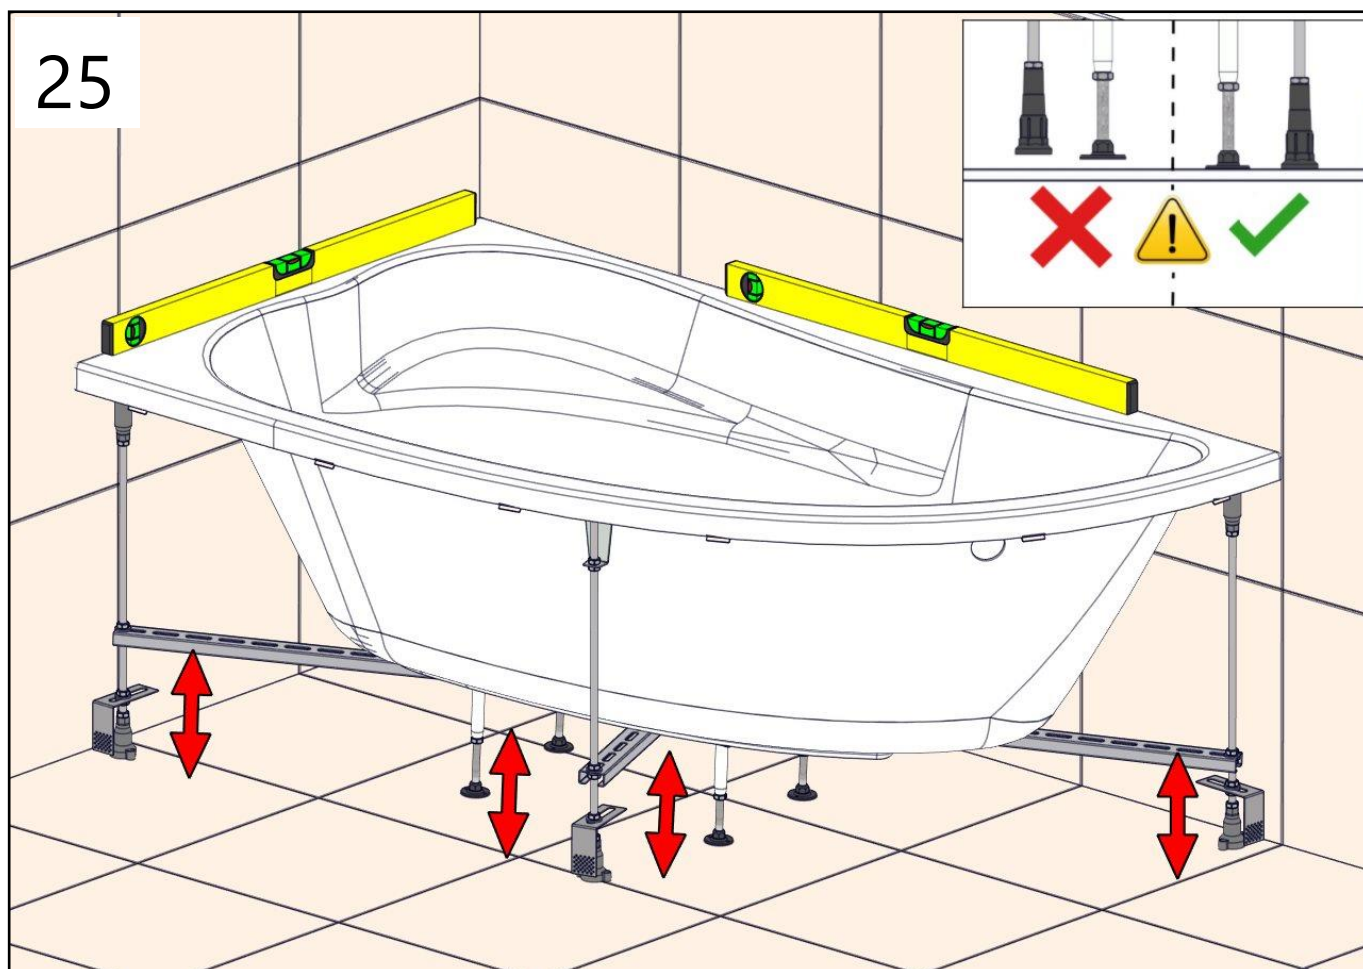


26

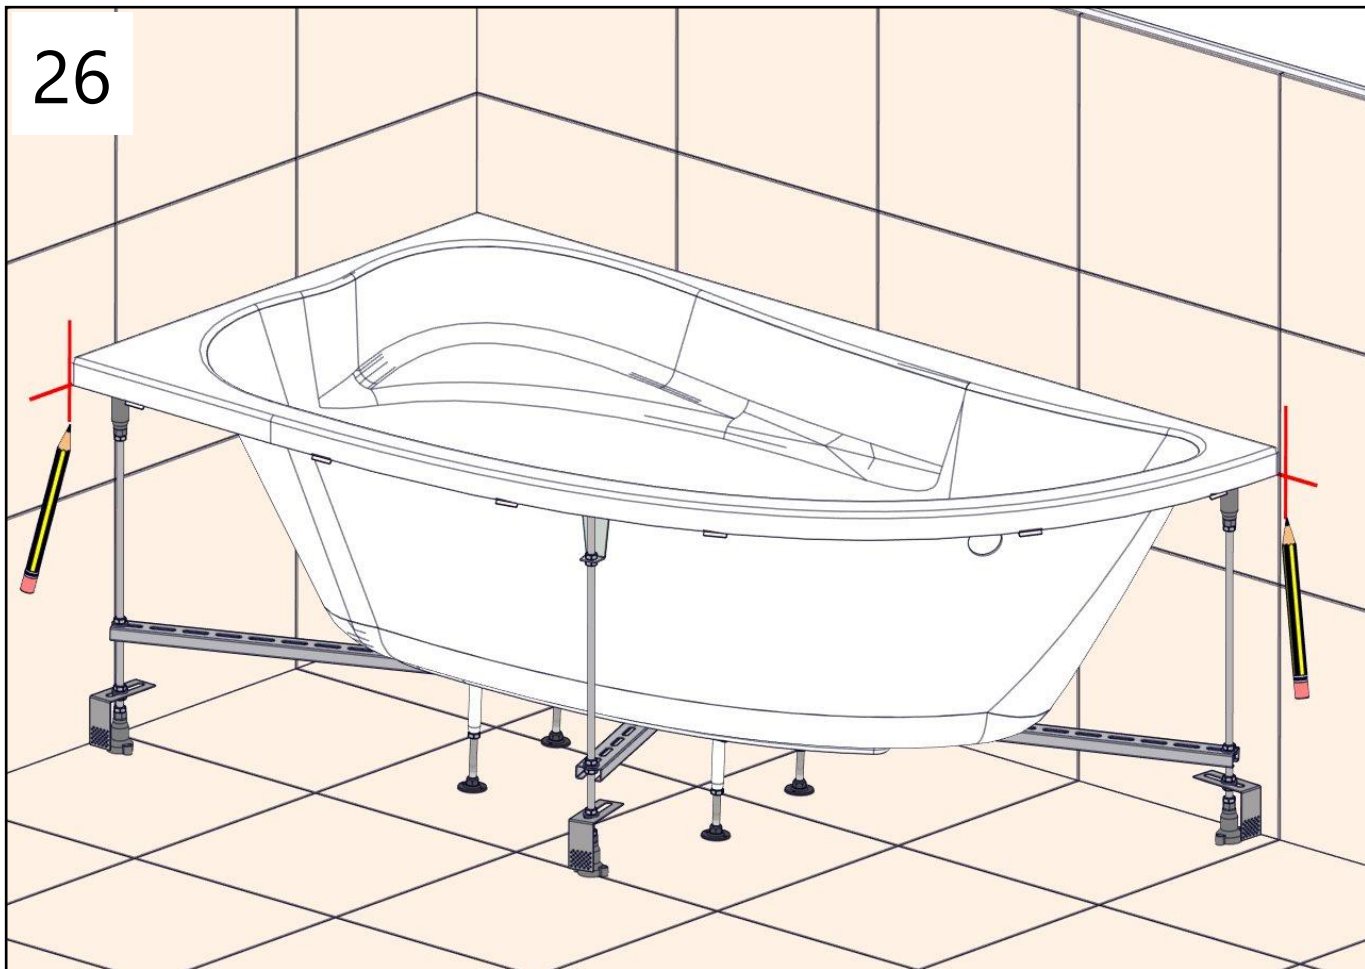

27

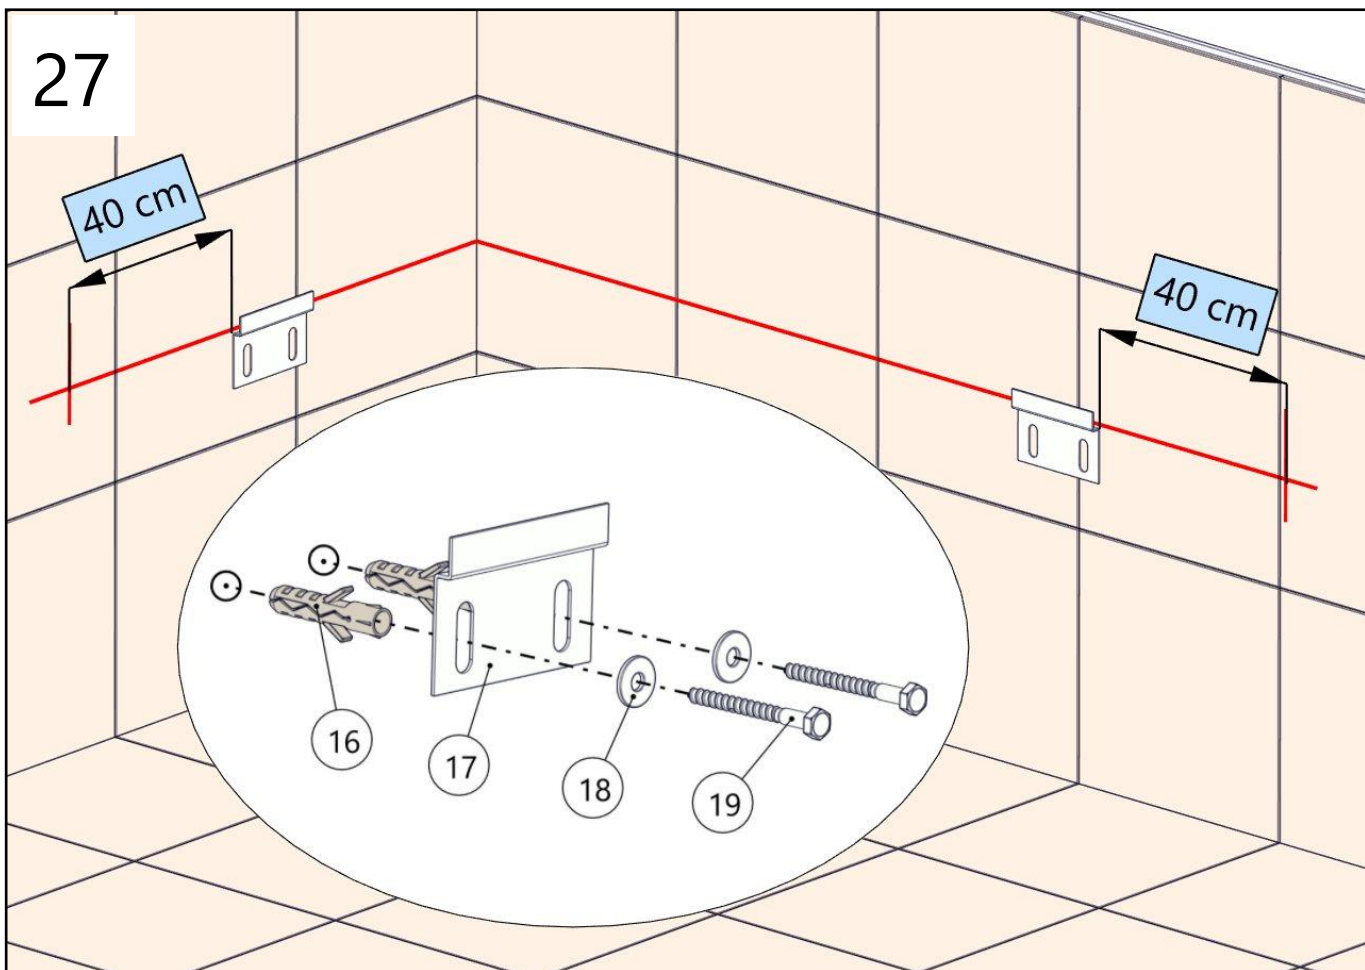

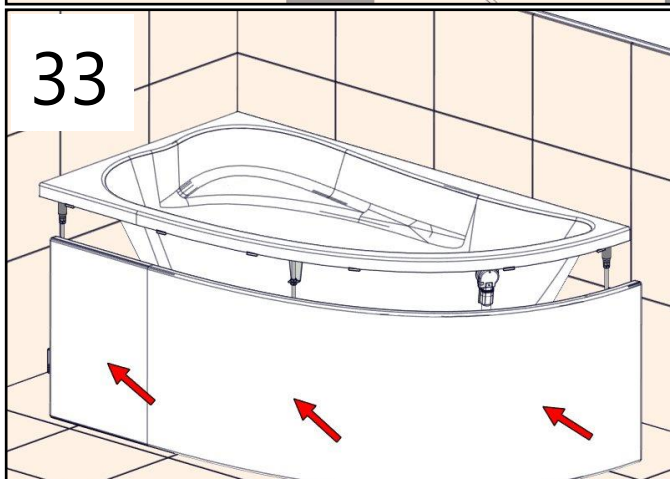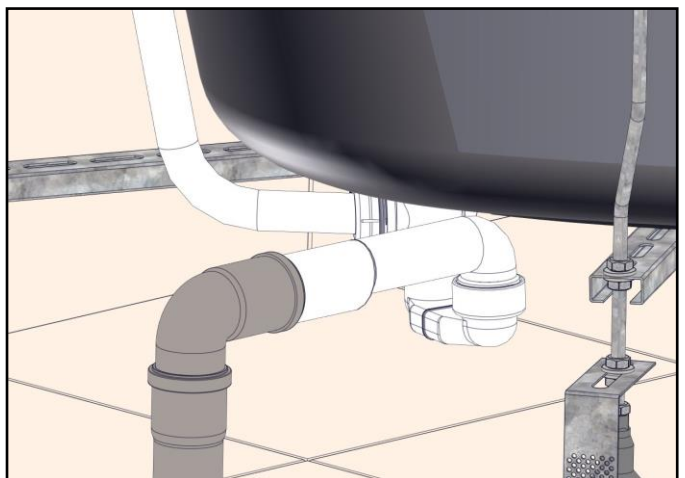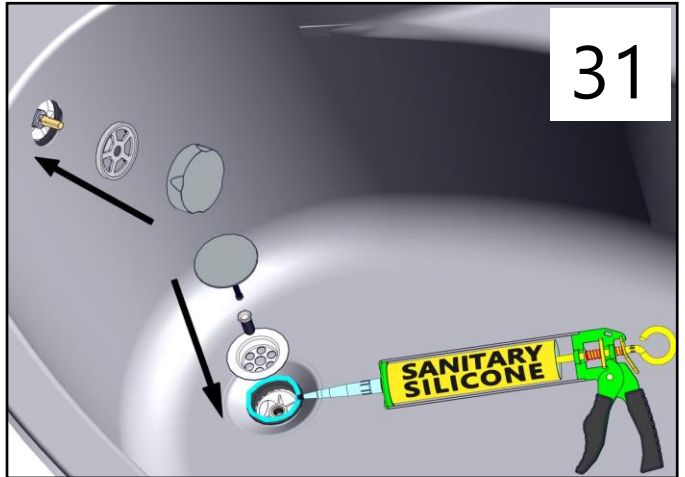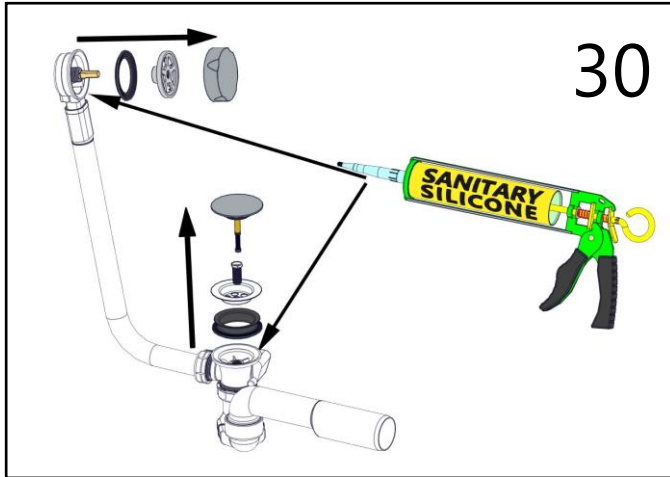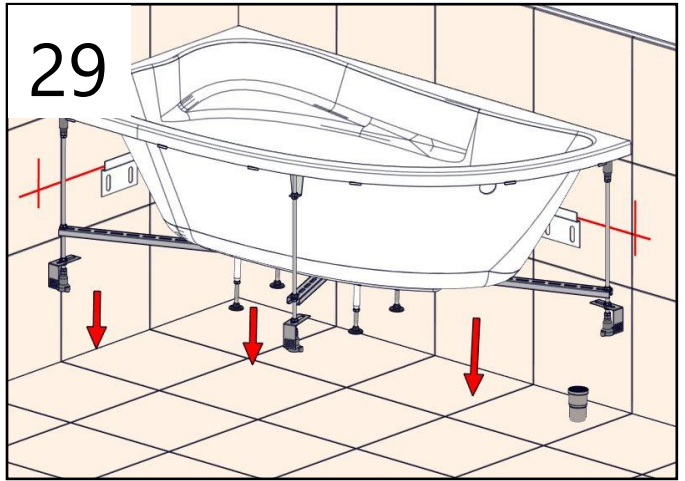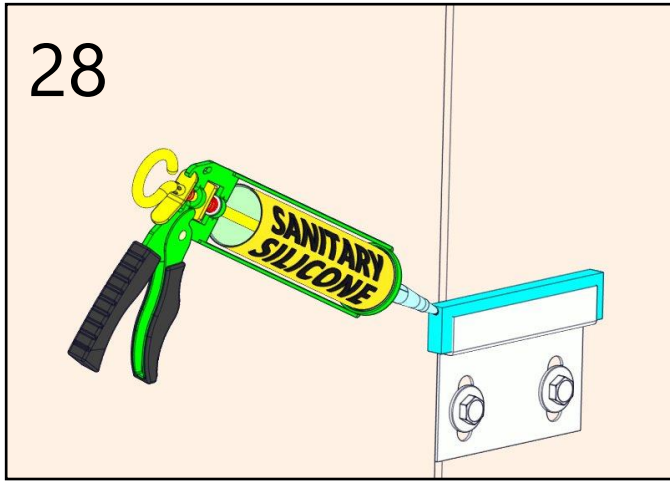

34

